

Berger, Fuchsia Silicone Vibrating Egg with Wireless Remote Control

SKU : BERGER-UF-VIBRANT-SILICONE-AVEC-TELECOMM-B9FA · Brand : JOYSTOYS PARIS

The Berger vibrating egg from JOYSTOYS PARIS pairs an ergonomic, elongated pebble-shaped design with soft, silky silicone that feels smooth against the skin and cleans up easily. Its silver-toned upper shell houses the vibration mechanism, connected by a flexible, discreet cord that allows for precise and comfortable positioning.

The standout feature of this model is its oval wireless remote, featuring a sleek design finished with the brand's logo. It lets users control vibration settings remotely, without needing to handle the egg directly, delivering a hands-free experience that's especially popular for solo play or with a partner. The single central button keeps operation simple and intuitive, a key selling point for customers who want user-friendly products.

This model is ideal for shops and retailers looking to add a versatile, competitively priced option to their remote-controlled vibrating egg lineup. Its vivid fuchsia hue and premium silicone finish make it a visually appealing product both on shelves and online, with packaging and positioning well suited to a discerning mainstream customer base.

Highlights

- Wireless remote for discreet, hands-free control
- Soft, silky silicone that feels gentle against the skin
- Ergonomic egg-shaped design that's easy to position
- Single control button for effortless, intuitive use
- Vivid fuchsia color with a premium finish

Technical specifications

Material	Premium silicone
Color	Fuchsia / magenta
Control type	Wireless remote control
Interface	Single push-button
Egg-to-remote connection	Wireless (radio frequency)
Shape	Oval egg-shaped, with flexible positioning cord

Box contents

- 1 silicone vibrating egg
- 1 wireless remote control

Usage tips

Apply a generous amount of silicone-compatible water-based lubricant before use for optimal comfort. Position the egg using the flexible cord, then use the remote control from a distance to activate and adjust the vibrations.

Care instructions

Clean the egg and remote after each use with a specialized toy cleaner or warm water and mild soap, then dry thoroughly before storing in a clean, dry place away from direct sunlight.

Safety information

This product is intended for external and intimate use only, and should be used with a silicone-compatible water-based lubricant. Do not use if skin is injured or irritated. Keep out of reach of children.