

Hailey Thrusting Vibrator CHILIPINK - Rabbit Thrusting Vibrator

SKU : HAILEY-THRUSTING-VIBRATOR-251A · Brand : CHILIPINK

The Hailey Thrusting Vibrator by CHILIPINK is a next-generation rabbit vibrator engineered to deliver dual combined stimulation: an automated telescopic thrusting motion paired with powerful vibrations, complemented by a dedicated clitoral arm for a simultaneous, all-encompassing experience.

Fully coated in soft-touch silicone, this toy features a ribbed texture along the main shaft, designed to heighten sensation with every thrust. Its ergonomic curved design allows for a natural grip and precise positioning to target both internal and external erogenous zones.

Equipped with multiple vibration patterns and several thrusting speeds, this versatile device adapts to every user's preferences. Fully waterproof, it can be used in the shower or bath, and recharges easily via USB cable using the dedicated charging base included in the packaging.

This product is offered to professional retailers in a premium CHILIPINK gift box, with polished packaging that highlights the product's key features, ideal for shelf display or online sales.

Highlights

- Dual stimulation: telescopic thrusting motion and clitoral vibrations working simultaneously
- Soft-touch silicone, pleasant to the skin and hypoallergenic
- Fully waterproof for use in the shower or bath
- USB rechargeable with included magnetic charging base
- Multiple vibration modes and thrusting speeds
- Ergonomic curved design for precise targeting of erogenous zones

Technical specifications

Brand	CHILIPINK
Material	Soft-touch silicone
Functions	Telescopic thrusting + multi-mode vibration
Waterproofing	Waterproof (shower and bath use)
Power source	USB rechargeable, charging base included
Color	Pastel green
Intended audience	Adults only

Box contents

- 1 x Hailey Thrusting Vibrator
- 1 x USB charging base
- 1 x USB charging cable
- 1 x CHILIPINK gift box

Usage tips

Apply a water-based lubricant compatible with silicone before use for optimal comfort. Start with the gentlest intensity settings before gradually increasing vibration power and thrusting speed to suit personal preference.

Care instructions

Clean the device before and after each use with a specialized sex toy cleaner or warm water and mild soap. Dry thoroughly before storing in a dry place, away from direct light and dust. Avoid contact with other silicone toys during storage to preserve the material.

Safety information

Product intended for adult use only. Use only water-based lubricant, as silicone-based lubricants may damage the material. Do not submerge the charging base. Keep out of reach of children.