

TERRY - Realistic Silicone Vibrator by JOYSTOYS PARIS

SKU : TERRY-R571 · Brand : JOYSTOYS PARIS

TERRY is a realistic vibrator from JOYSTOYS PARIS, crafted to deliver a natural yet powerful experience thanks to its lifelike shape, complete with veined texture and anatomical detail for authentic visual and tactile realism. The entire body is covered in soft-touch silicone that feels smooth against the skin and is easy to clean, ensuring comfortable and hygienic use every time. The base features an intuitive single-button control panel, allowing effortless navigation between the various vibration modes to suit every user's preference. TERRY is fully waterproof, making it suitable for use in the shower or bath, and it recharges easily via USB cable, eliminating the need for disposable batteries and offering a practical, cost-effective power solution. Its elongated shape and ergonomic grip make it a versatile toy suitable for beginners and experienced users alike who are seeking powerful, realistic stimulation. This product is designed for industry professionals looking to offer their customers a high-quality vibrator with refined design and premium packaging under the WINYI brand, distributed by JOYSTOYS PARIS.

Highlights

- Realistic veined shape for a natural, authentic feel
- Soft-touch silicone that feels smooth against the skin
- Multiple vibration modes for varied sensations
- Fully waterproof, safe for shower or bath use
- USB rechargeable, no disposable batteries needed
- Simple, intuitive single-button control at the base

Technical specifications

Brand	WINYI / JOYSTOYS PARIS
Material	Soft silicone
Color	Black
Function	Multi-speed vibration
Waterproof rating	Fully waterproof (safe for use in water)
Power source	USB rechargeable
Controls	Single button on base control panel

Box contents

- 1 TERRY realistic vibrator
- 1 USB charging cable
- 1 WINYI branded packaging box

Usage tips

For optimal glide and comfort, use with a water-based lubricant that is compatible with silicone toys. Fully charge the device before first use with the included USB cable. Press the power button to turn on the device, then use the same button to cycle through the available vibration modes.

Care instructions

Clean the product before and after each use with warm water and a mild soap or a specialized toy cleaner.

Dry thoroughly before storing in a clean, dry place away from direct light and dust. Avoid prolonged contact with silicone-based materials (such as certain silicone lubricants) to preserve the toy's surface texture.

Safety information

For adult use only. Check waterproofing before use in wet environments. Do not expose the device to direct heat sources. Use only with silicone-compatible lubricant. Clean after each use to ensure optimal hygiene.